

SuperKit Prototype

(This is for audio testing only. Charge control and power saving not yet operational.)


A. OVERVIEW

- 1 Power Indicator
- 2 Volume Control
- 3 Speaker
- 4 GSM Input
- 5 Power Switch
- 6 Charge Indicator
- 7 Microphone



B. Vehicle Placement Guide:

The SuperKit must be placed wherein its microphone is directed to the mouth of the user. The sun visor clip is designed reversible to easily transfer the SuperKit in case you change the position of the sun visor.

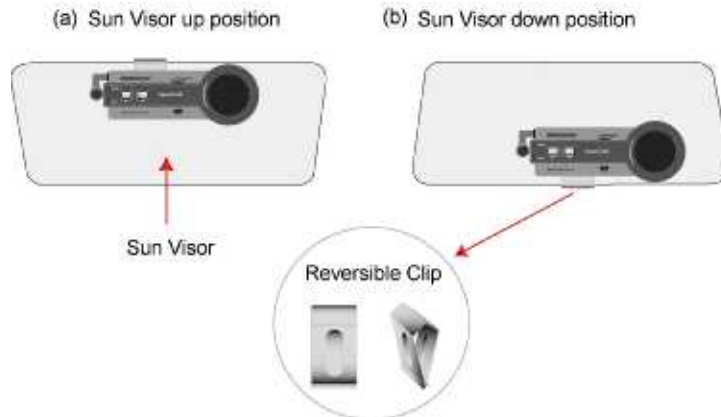

C. Turning The SuperKit On and Off:

1. To turn the SuperKit ON, slide the *Power Switch* to the right. The *Power Indicator* will light up.
2. To turn the SuperKit OFF, slide the *Power Switch* to the left. (There is a 3-4 seconds delay before the *Power Indicator* turns off.)

D. Charging Operations:

No intelligent charge on the prototype, connect the supplied charger. Charge for about 4 hours then unplug the charger.

E. Preparation (How to Use):

- § Plug the "grey end" of the supplied cable to the SuperKit's **GSM Input** .
- § Plug the "black end" of the cable to the GSM using adaptor if needed. (**Nokia** and **Ericsson** adaptors are supplied in this package).
- § Turn on the Kit. (Incoming and outgoing call should be on the kit).

